

ABSOLUTE INCLINOMETER PROFIBUS DP



Main Features

- Compact and heavy duty industrial model
- Microprocessor controlled sensors
- Interface: Profibus DP
- Code: Binary
- Resolution: up to 0.001°
- Accuracy: up to 0.15°
- Viscosity: 2 mPas (others on request)

Applications

- Inclination measurement
- Angle measurement
- Parallel lifting devices
- Leveling Systems
- Inground lifts

Mechanical Structure

- Housing of Aluminum
- Protection class: IP 66 with connection cap

Electrical Features

- Linear and temperature compensated characteristic line
- status indication with two LEDs in the connection cap
- Polarity inversion protection
- Over-voltage-peak protection

ABSOLUTE INCLINOMETER PROFIBUS DP

Technical Data

Electrical Data

Model	ANS 15	ANS 30
Measuring range	+/- 15°	+/- 30°
Resolution	0.001°	0.01°
Accuracy (T = 0 °C .. +55 °C)	0.15°	0.2°
Accuracy (T = -25 °C .. +85 °C)	0.3°	0.4°
Damping period (0° -> 15°, t=90%)	typ. 2.5 s	on request
Supply voltage	10 - 30 V DC	
Power consumption	3 Watts	
Electrical Lifetime	> 10 ⁵ h	
EMC	EN 61000-6-4, EN 61000-6-2	
Bus connection	Line-driver according to RS 485 Galvanically isolated by opto couplers	
Connection	Accessory connection cap, IP 66	
Cycle time	Typ. 4 measurements / second (because of measuring principle)	
Device addressing	Programmable by rotary switches in connection cap	

Environmental Conditions


Operating temperature	- 25 °C ... + 85 °C
Storage temperature	- 40 °C ... + 85 °C
Humidity	98 % (without liquid state)
Protection class (EN 60529)	IP 66 (with connection cap connected)

ABSOLUTE INCLINOMETER PROFIBUS DP

Interface

Installation

The inclinometer is connected by two or three cables depending on whether the power supply is integrated into the bus cable or connected separately. If the power supply is integrated into the bus cable, one of the cable glands can be fitted with a plug. The cable glands are suitable for cable diameters from 6.5 up to 9 mm.

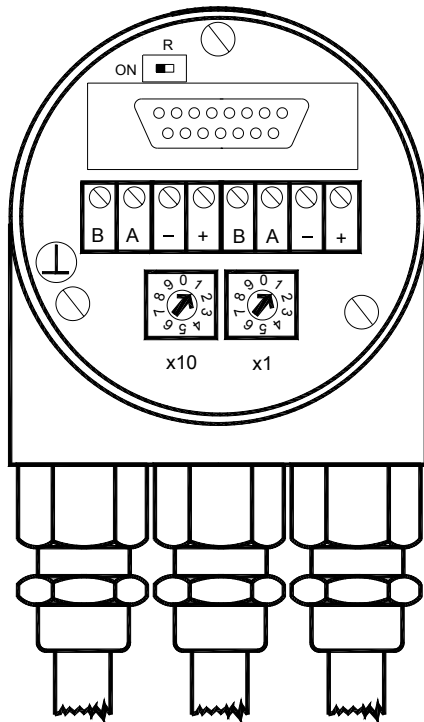


The settings of the Profibus-DP device address is done by user-friendly rotary switches in the connection cap. Allowed addresses are between 1 and 99, and each can only be used once. The connection cap can easily be opened for installation by removing the two cap screws.

Termination resistors are integrated in the connection cap. These must be switched on if the inclinometer is connected at the end or the beginning of the bus.



 Connecting the data line and the power supply



Clamp	Description
B (left)	Bus line B (Bus in)
A (left)	Bus line A (Bus in)
-	0 V
+	10 – 30 V
B (right)	Bus line B (Bus out)
A (right)	Bus line A (Bus out)
-	0 V
+	10 – 30 V

The power supply has to be connected once (no matter which clamps). If the terminating resistor is switched on the outgoing bus lines are disconnected.

A GSD-file is necessary for installing the inclinometer. The disc with the GSD-file and the detailed user manual can be ordered from FRABA or downloaded from our homepage (www.posital.de).

The connection cap is provided with two LEDs on the backside, which optically represent the device status. This can be very useful for installing and setting-up the inclinometer.

ABSOLUTE INCLINOMETER PROFIBUS DP

Configuration

When configuring the FRABA inclinometer the user specifies the functions of the device by selecting different configurations:


Selection "Inclinometer"	The unchanged inclinations of both axes are given out (no calculation by the controller).
Selection "Programmable Inclinometer"	Inclinations outside the maximum measuring range can be indicated by a status byte. Additionally there is the possibility to set preset values. The preset value is the inclination value that should be reached at a certain physical inclination of the sensor axis. Independent preset values for both axes can be activated by setting bits in the control byte.

Depending on the selected configuration number and length of in- and output data differ:

Selection "Inclinometer":	1 input word (16 bit) for inclination X-axis 1 input word (16 bit) for inclination Y-axis
Selection "Programmable Inclinometer":	1 input word (16 bit) for inclination X-axis 1 input word (16 bit) for inclination Y-axis 1 output word (16 bit) for preset value X-axis 1 output word (16 bit) for preset value Y-axis 1 input byte (8 bit) status 1 output byte (8 bit) control

ABSOLUTE INCLINOMETER PROFIBUS DP

Mechanical Drawings

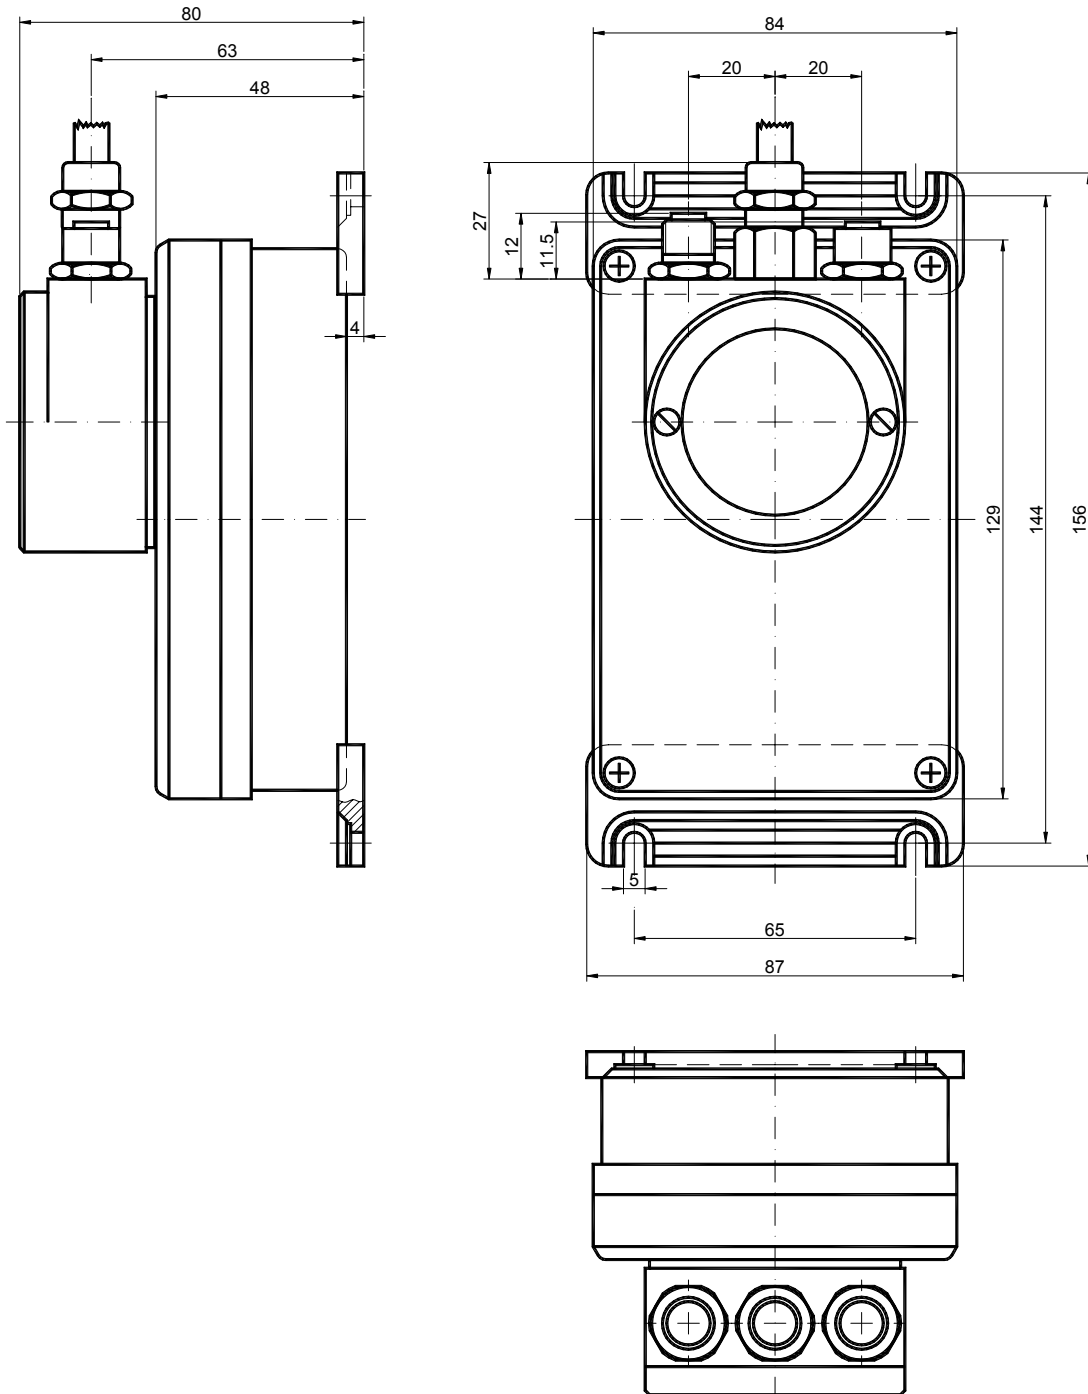

ABSOLUTE INCLINOMETER PROFIBUS DP

Models / Ordering Description

Description	Type Key			DP	2	2	3PG
Absolute inclinometer	ANS	-				
Measuring range		15					
		30					
PROFIBUS DP				DP			
Version					2		
Number of axes						2	
Connection	Connection cap						3PG
	- has to be ordered separately – see accessories						

Other models on request.

Accessories and Documentation

Description		Type
Connection cap	T-coupling-functionality with integrated address setting. Standard; 3 cable glands for cable diameters of 6.5 up to 9mm.	AH 58-B1DP-3PG
Connection cap "2M20" - special version -	Same functionality as standard cap, but only two cable glands for cable diameters of 9 up to 13 mm.	AH 58-B1DP-2M20
GSD-file *		
User manual *	Installation and configuration manual, English	UME-ANS-DP
User manual *	Installation and configuration manual, German	UMD-ANS-DP

* These can be downloaded free of charge from our homepage www.posital.de.

We do not assume responsibility for technical inaccuracies or omissions. Specifications are subject to change without notice.